

Instructions for Removing Throttle Shaft Pin (Part # Z02100703)

- 1 The Throttle Pin will be visible between the Throttle Lever and Choke Lever
- 2 Insert Flat Head screwdriver between the carburetor body and Pointed tip of Pin
- 3 With screwdriver against carburetor body , rotate side of screwdriver clockwise against the pointed tip of the Throttle pin
- 4 This action should push pin outward toward Throttle Flange.
- 5 When throttle shaft pin has been partially pushed out of carburetor body, use pliers to pull pin completely out.
- 6 Once the pin has been removed, the Throttle Shaft may be disassembled or removed
- 7 To replace Throttle Shaft Pin, Align Throttle Shaft Groove with hole then place pointed tip of pin into hole and press pin into carburetor body until end of pin is flush with outside of carburetor body

Step 1



Step 2



Steps 3 and 4



Step 5



Step 6

